



PE90

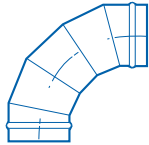

E90

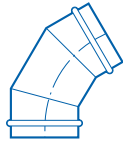

E60




PE45



E45




E22/30

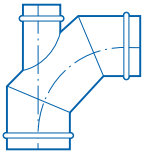


E90L




E290/EV290




E45R

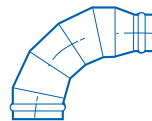


E90R

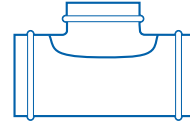


PT

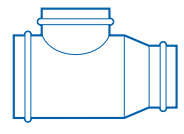


TR

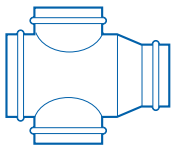


TRX

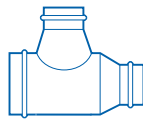


CTR

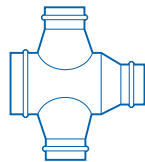


CTRX

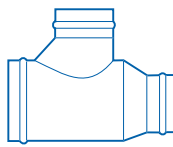


CBR

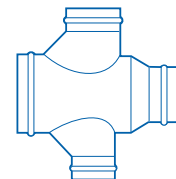


CBRX

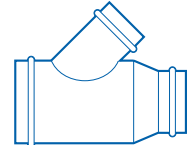


LR

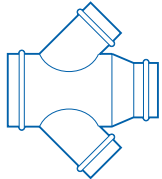


LRX

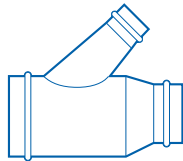


CLR

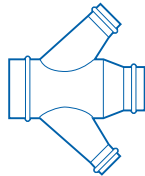

CLRX




RD




RDE




PRD



D




PCP



FCP




EC

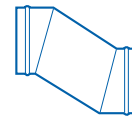


OFF




RSQ




Y



YR



BHTR/BHTRV



AXRT



PB



SB



ST/FT



STC/FTC



SL/FL



SCB/FCB



SRR/FRR



FA